

REPLACING THE LEG SPRING: Without Cotter Pin Tools

Step 1: Turn Rebounder upside down with legs pointing up.



Step 2: Remove the rubber tip from the leg that needs replacing. Set aside.



Step 3: Inside of the leg, you will see a hook where the spring attaches to the leg. Using the Spring Tool, hook the tool to the spring and pull up.



Detach the spring from the leg. Remove the leg and set aside




Step 4: Using the Leg Spring tool, pliers, or other tool, pull up on the end of the coiled spring (attached to the leg base). This should allow for you to pull the spring loose. Discard old spring.



Step 5: Using the Leg Spring Tool, pliers, or similar tool, pull the end of the new spring (coiled end) slightly open, and wrap around cotter pin.



Step 6: Reattach the leg by sliding it over the new spring. Using the Spring Tool, hook the spring and lift over the hook on the leg.

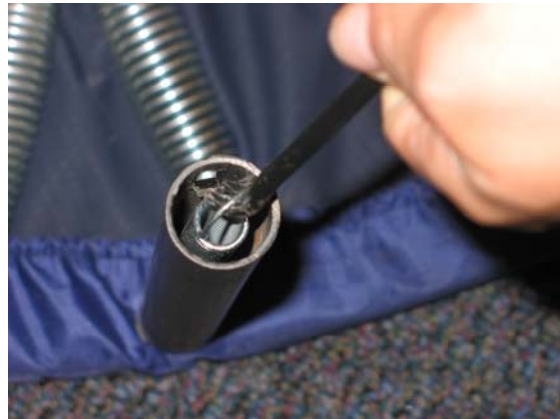

Step 7: Reattach the rubber tip.

